








| Originale  | Sostituto   |
|--|---|
|  Standby/On       |  Power           |
|  Open/Close       |  Eject           |
|  1                |  1               |
|  2                |  2               |
|  3                |  3               |
|  4 / << Shuttle   |  4               |
|  5                |  5               |
|  6 / Shuttle >>   |  6               |
|  7                |  7               |
|  8                |  8               |
|  9               |  9              |
|  0 / Screen Fit |  0             |
|  Audio          |  Dual          |
|  Mode/Repeat    |  Text          |
|  Zoom/SVHS      |  Shift + Eject |
|  3D Sound       |  3D            |
|  Clear          |  Exit          |

| Originale   | Sostituto   |
|---|---|
|  TV/VCR            |  TV/R    |
|  Clock/Counter     |  Options |
|  Angle/A. TRK      |  Pre Ch  |
|  View to DVD       |  Media   |
|  View to VCR       |  Smart   |
|  Input Sel         |  AV      |
|  Digest/F.ADV/Step |  Format  |
|  TRK Up            |  Vol +   |
|  TRK Down          |  Vol -   |
|  Prog+             |  Ch +    |
|  Prog-            |  Ch -   |
|  Display         |  Info  |
|  <<              |  <<    |
|  I<<             |  I<<   |
|  Stop            |  Stop  |
|  Play            |  Play  |
|  Pause           |  Pause |



