



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Source		AV
	Tv		TV/R		P +		Ch +
	1		1		P -		Ch -
	2		2		Info		Info
	3		3		Menu		Menu
	4		4		Guide		Guide
	5		5		Tools		Options
	6		6		Return		Back
	7		7		Up		Up
	8		8		Right		Right
	9		9		Down		Down
	0		0		Left		Left
	FAV CH		Shift + Pre Ch		Enter		Ok
	PRE CH		Pre Ch		CH LIST		List
	Vol+		Vol +		Exit		Exit
	Vol-		Vol -		Red		Red
	Mute		Mute		Green		Green





Originale		Sostituto		Originale	Sostituto
	Yellow		Yellow		
	Blue		Blue		
	TTX/MIX		Text		
	SRS		Media		
	P SIZE		Format		
	Dual I/II		Dual		
	AD		Shift + Subt		
	SUBT		Subt		
	<<		<<		
	<<		I<<		
	Pause		Pause		
	>>		>>		
	>>		>>I		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

