



Originale	Sostituto
Standby / On	Power
Open / Close	Eject
1	1
2	2
3	3
4 / << Shuttle	4
5	5
6 / Shuttle >>	6
7	7
8	8
9	9
0	0
Clear	Exit
TV / VCR	TV/R
DVD View	Smart
VCR View	Media
Audio	Dual

Originale	Sostituto
TRK +	Ch +
TRK -	Ch -
F.Adv / Step	Shift + Pause
I<< / <<	<<
I<< / <<	I<<
>>I / >>	>>
>>I / >>	>>I
Play / Pause	Play
Play / Pause	Pause
Stop	Stop
Menu	Menu
Subtitle	Subt
Info.	Info
Return	Back
Up	Up
Right	Right
Down	Down





Originale	Sostituto
	Left
	Ok
	Rec
	Sleep
	Guide
	D. Menu
	AV
	Format
	Pre Ch
	Shift + Power
	Text
	Mute
	Shift + 1
	Shift + 2
	Shift + 3
	Shift + 4
	Shift + 5

Originale	Sostituto
	Shift + 6
	Shift + 7
	Shift + 8
	Shift + 9
	Shift + 0
	Vol +
	Vol -
	Shift + Ch +
	Shift + Ch -

