


 

 


 
 

 

 
 


 



 








Originale	Sostituto
Power TV	Power
Power STB	+  Shift + Power
Source	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	Text
PRE-CH	Pre Ch
Vol+	Vol +
Vol-	Vol -

Originale	Sostituto
Mute	Mute
CH.List	List
P+	Ch +
P-	Ch -
Menu	Menu
Smart Hub	Smart
Guide	Guide
Tools	Options
Info	Info
Back/Return	Back
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Red	Red





	Originale	Sostituto	Originale	Sostituto
	 Green	 Green		
	 Yellow	 Yellow		
	 Blue	 Blue		
	 D	 Dual		
	 Status	 TV/R		
	 More	 3D		
	 E-Manual	 D. Menu		
	 Recommend	 Format		
	 AD/Subt	 Subt		
	 <<<	 <<<		
	 I<<<	 I<<<		
	 Pause	 Pause		
	 >>>	 >>>		
	 >>I	 >>I		
	 Rec	 Rec		
	 Play	 Play		
	 Stop	 Stop		

