



Originale	Sostituto
 Power	 Power
 Open / Close	 Eject
 Dimmer /	 TV/R
 DVD	 Shift + 1
 Tuner / Band	 Shift + 2
 AUX	 Shift + 3
 NTSC/PAL / EZ	 AV
 MO/ST / Slow	 Format
 MO/ST / Slow	 Shift + Play
 Subtitle	 Subt
 Step	 Shift + Pause
 DSP / EQ	 Options
 Repeat	 Text
 I<<	 I<<
 Stop	 Stop
 Play / Pause	 Pause
 Play / Pause	 Play

Originale	Sostituto
 >>I	 >>I
 Dolby PLII Mode	 Smart
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 Dolby PLII Effect	 Media
 Return	 Back
 Menu	 Menu
 Info	 Info
 Mute	 Mute
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 1 / RDS Display	 1







