



| Originale | Sostituto |
|--------------|-----------|
| DVD Power | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Open / Close | Exit |
| Setup | Options |
| Zoom | Eject |
| 3D Sound | 3D |
| Bookmark | Pre Ch |
| Volume Con. | Guide |

| Originale | Sostituto |
|--------------|---------------|
| << | << |
| >> | >> |
| Stop | Stop |
| Play / Pause | Play |
| Play / Pause | Pause |
| I<< | I<< |
| >>I | >>I |
| Return | Back |
| Step | Shift + Pause |
| Clear | Shift + Exit |
| Top Menu | Shift + Menu |
| Top Menu | D. Menu |
| Display | Info |
| Menu | Menu |
| Up | Up |
| Left | Left |
| Enter | Ok |



