

 



 

 

 

 

 

 

 

 

 

 

 

 
 
 
 






Originale	Sostituto
 Power	 Power
 Source	 AV
 HDMI	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 CH List	 List
 Media.P	 Media
 Menu	 Menu
 FAV.CH	 Shift + Pre Ch
 Tools	 Options
 Info	 Info
 Exit	 Exit
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red



