



Originale	Sostituto
POWER	Power
OPEN/CLOSE	Eject
DIMMER	SHIFT + MUTE Shift + Mute
DVD	Blue
TUNER/BAND	Green
AUX	Red
ASC	SHIFT + OK Shift + Ok
SLOW/MO/ST	List
SUBTITLE	Subt
SUPER 5.1	Options
MUSIC/V-H/P	Dual
MOVIE	D. Menu
I<<	I<<
STOP	Stop
PAUSE	Pause
PLAY	Play
>>I	>>I

Originale	Sostituto
PL II MODE	Smart
TUNING+ / CH+	Ch +
TUNING- / CH-	Ch -
VOLUME+	Vol +
VOLUME -	Vol -
PL II EFFECT	Media
RETURN	Back
MENU	Menu
INFO	Info
MUTE	Mute
UP	Up
LEFT	Left
ENTER	Ok
RIGHT	Right
DOWN	Down
1/RDS DISPLAY	1
2	2



