


 
 


Originale	Sostituto	Originale	Sostituto
Power	Power	Tools	Setup / OPT /
TV	TV/Radio /	Up	Up
1	1	Return	Back / Return
2	2	Left	Left
3	3	Enter	OK
4	4	Right	Right
5	5	Internet	Smart / List
6	6	Down	Down
7	7	Exit	Exit / Cancel / Clear
8	8	Red	Red / Netflix / Search
9	9	Green	Green / APP / Repeat
FAV CH	Shift + Fav / Marker / PC	Yellow	Yellow / YouTube / Repeat
0	0	Blue	Blue / Prime Video / Random
PRE CH	Fav / Marker / PC	Vol+	Vol+
Info	Info / Angle	Source	AV / Input / RDS
Menu	Menu / Home	P +	CH+ / Page+
Guide	Guide / EPG / -/--	Vol-	Vol-

Originale	Sostituto	Originale	Sostituto
Power	Power	Tools	Setup / OPT /
TV	TV/Radio /	Up	Up
1	1	Return	Back / Return
2	2	Left	Left
3	3	Enter	OK
4	4	Right	Right
5	5	Internet	Smart / List
6	6	Down	Down
7	7	Exit	Exit / Cancel / Clear
8	8	Red	Red / Netflix / Search
9	9	Green	Green / APP / Repeat
FAV CH	Shift + Fav / Marker / PC	Yellow	Yellow / YouTube / Repeat
0	0	Blue	Blue / Prime Video / Random
PRE CH	Fav / Marker / PC	Vol+	Vol+
Info	Info / Angle	Source	AV / Input / RDS
Menu	Menu / Home	P +	CH+ / Page+
Guide	Guide / EPG / -/--	Vol-	Vol-





Originale	Sostituto
 Mute	 Mute / Dimmer
 P -	 CH- / Page-
 TTX/MIX	 Text / Goto
 Media P	 Display / Media
 Content	 D.Menu / Top
 CH LIST	 Shift + Smart / List
 AD	 Audio / Lang I/II
 SUBT.	 Subtitle / EQ
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Originale	Sostituto

