



Originale	Sostituto
Power	Power
Input	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	GUIDE
Pre CH	Pre Ch
<<	<<
Stop	Stop
Play	Play

Originale	Sostituto
>>	>>
V.Menu	D. Menu
Mute	Mute
P+	Ch +
P+	Up
P-	Ch -
P-	Down
Vol+	Right
Vol+	Vol +
Vol-	Left
Vol-	Vol -
Menu	Menu
Display	Info
P.STD	3D
Rec	Rec
Eject	Eject
Pause / P/S	Pause



