
















 





 






















 



 





























Originale		Sostituto		Originale		Sostituto	
	DVD	 + 	Shift + 2		0		0
	Tuner	 + 	Shift + 6		Cancel	 + 	Shift + Exit / Cancel / Clear
	Port	 + 	Shift + 3		I<<		I<< / Preset-
	Aux	 + 	Shift + 7		Step	 + 	Shift + Pause / Step /
	Power		Power		Pause		Pause / Step / Freeze
	Open / Close		Eject / Surround		>>I		>>I / Preset+
	TV / Video		TV/Radio /		<<		<< / Tune-
	1		1		Stop		Stop / Hold
	2		2		Play		Play / Slow
	3		3		>>		>> / Tune+
	4		4		Volume +		Vol+
	5		5		Mute		Mute / Dimmer
	6		6		Tuning + / CH +		CH+ / Page+
	7		7		Volume -		Vol-
	8		8		Tuning - / CH -		CH- / Page-
	9		9		Menu		Menu / Home
	Remain		D.Menu / Top		Return		Back / Return




























 





Originale	Sostituto
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Exit	 Exit / Cancel / Clear
 SD/HD / Tuner Memory	 Rec / Rec Mode
 Mo/St / Slow	 Picture / Format
 Zoom	 Zoom / Size
 Info	 Info / Angle
 Logo	 Setup / OPT /
 Sleep	 Sleep / Timer
 Dimmer	 Shift + Mute / Dimmer
 Repeat	 Green / APP / Repeat
 V-Sound/V-H/P	 Sound / Title

Originale	Sostituto
 P.Bass	 Text / Goto





Originale	Sostituto	Originale	Sostituto
	Power		Power
	TV / Video		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-

Originale	Sostituto	Originale	Sostituto
	Menu		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down

