 







 



 

 

 



 



 



 



 



 



 

 

 



 
 


 

 

 

 
 


 






 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 TV	 TV/Radio /	 PR+	 CH+ / Page+
 1	 1	 PR-	 CH- / Page-
 2	 2	 CH-List	 Display / Media
 3	 3	 Menu	 Menu / Home
 4	 4	 FAV-CH	 Fav / Marker / PC
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Info	 Info / Angle
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Alarm	 Smart / List	 Left	 Left
 Pre-CH	 Back / Return	 Right	 Right
 Mute	 Mute / Dimmer	 Enter	 OK
 Source	 AV / Input / RDS	 Red	 Red / Netflix / Search
 Vol+	 Vol+	 Green	 Green / APP / Repeat

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 TV	 TV/Radio /	 PR+	 CH+ / Page+
 1	 1	 PR-	 CH- / Page-
 2	 2	 CH-List	 Display / Media
 3	 3	 Menu	 Menu / Home
 4	 4	 FAV-CH	 Fav / Marker / PC
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Info	 Info / Angle
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Alarm	 Smart / List	 Left	 Left
 Pre-CH	 Back / Return	 Right	 Right
 Mute	 Mute / Dimmer	 Enter	 OK
 Source	 AV / Input / RDS	 Red	 Red / Netflix / Search
 Vol+	 Vol+	 Green	 Green / APP / Repeat





Originale	Sostituto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TXT/MIX	 Text / Goto
 SRS	 Picture / Format
 P.Size	 Zoom / Size
 Dual/I/II	 Audio / Lang I/II
 Guide	 Guide / EPG / -/--
 SUBT.	 Subtitle / EQ
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Originale	Sostituto

