



Originale	Sostituto
Power	Power
Source	AV / Input / RDS
Caption	Subtitle / EQ
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-	Eject / Surround
0	0
PRE-CH	Fav / Marker / PC
Auto Prog.	TV/Radio /
FAV.CH	Shift + Fav / Marker / PC

Originale	Sostituto
ADD/Del	D.Menu / Top
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
CH List	Smart / List
CH-	CH- / Page-
Menu	Menu / Home
MTS	Display / Media
Guide	Guide / EPG / -/--
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right
Return	Back / Return



