



 



 


 





 

 



 




 





 

 





 

















 







Originale	Sostituto
 Power	 Power
 DVD	 Shift + 2
 Tuner Band	 Shift + 6
 Aux	 Shift + 7
 Open / Close	 Eject / Surround
 Title	 Shift + Sound / Title
 Menu	 Menu / Home
 TV / Video	 AV / Input / RDS
 TV Power	 Shift + Power
 Audio Mo/St	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TV Channel -	 Shift + CH- /
 TV Channel +	 Shift + CH+ /
 Display	 Display / Media
 Return	 Back / Return
 TV Volume -	 Shift + Vol-
 TV Volume +	 Shift + Vol+

Originale	Sostituto
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 << / Tuning	 << / Tune-
 >> / Tuning Up	 >> / Tune+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Volume -	 Vol-
 Volume +	 Vol+
 DSP/PLII Mode	 CH+ / Page+
 DSP/PLII Efect	 CH- / Page-
 Mute	 Mute / Dimmer





Originale	Sostituto	Originale	Sostituto
Sleep	Sleep / Timer	Angle	Info / Angle
1 / RDS Display	1	Zoom	Zoom / Size
2	2	DRC	D.Menu / Top
3 / TA	3	Clear	Exit / Cancel / Clear
Sound Edit	Sound / Title	Repeat	Green / APP / Repeat
4 / PTY -	4	Repeat A-B	Yellow / YouTube / Repeat
5 / PTY Search	5	Program	TV/Radio /
6 / PTY +	6	Step	Shift + Pause / Step /
SPK Mode	Smart / List	Go To	Text / Goto
7	7	Remain	Picture / Format
8	8		
9	9		
Pro Logic II	Shift + Audio / Lang I/II		
Slow	Shift + Play /		
0	0		
Setup	Setup / OPT /		
Test Tone	Shift + Text / Goto		

Goto

Originale	Sostituto	Originale	Sostituto
Sleep	Sleep / Timer	Angle	Info / Angle
1 / RDS Display	1	Zoom	Zoom / Size
2	2	DRC	D.Menu / Top
3 / TA	3	Clear	Exit / Cancel / Clear
Sound Edit	Sound / Title	Repeat	Green / APP / Repeat
4 / PTY -	4	Repeat A-B	Yellow / YouTube / Repeat
5 / PTY Search	5	Program	TV/Radio /
6 / PTY +	6	Step	Shift + Pause / Step /
SPK Mode	Smart / List	Go To	Text / Goto
7	7	Remain	Picture / Format
8	8		
9	9		
Pro Logic II	Shift + Audio / Lang I/II		
Slow	Shift + Play /		
0	0		
Setup	Setup / OPT /		
Test Tone	Shift + Text / Goto		

