







 







 



 



 













Originale	Sostituto
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 Subtitle / EQ
	 Zoom / Size
	 Sleep / Timer
	 TV/Radio /
	 Setup / OPT /
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle
	 Left

Originale	Sostituto
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Fav / Marker / PC
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7





	Originale	Sostituto	Originale	Sostituto
	8	8		
	9	9		
	--	Guide / EPG / -/--		
	0	0		
	Red	Red / Netflix / Search		
	Green/Alarm	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Home	Shift + Menu /		
	Return	Back / Return		

