



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 >>I CD	 >>I / Preset+
 Mute	 Mute / Dimmer	 +10/Tuning	 Guide / EPG / -/-
 Band/Tuner	 Smart / List	 Tuning/Album+	 CH+ / Page+
 Timer/Clock	 Shift + Sleep / Timer	 Vol+	 Vol+
 Timer On/Off	 Shift + Power	 Repeat	 Green / APP / Repeat
 AUX	 7	 Tuning/Album-	 CH- / Page-
 Program/Set	 Menu / Home	 Vol-	 Vol-
 MO/ST/ Rep.A-B	 Shift + Smart / List	 << Tape	 << / Tune-
 Sleep	 Sleep / Timer	 Stop Tape	 Shift + Stop /
 EQ/S.Bass	 Audio / Lang I/II	 <> Tape	 D.Menu / Top
 SRS Wow	 AV / Input / RDS	 >> Tape	 >> / Tune+
 Rec/Pause	 Rec / Rec Mode		
 Random	 Blue / Prime Video / Random		
 Counter Reset	 Exit / Cancel / Clear		
 I<< CD	 I<< / Preset-		
 Stop CD	 Stop / Hold		
 Play/Pause CD	 Play / Slow		

