


 
 







 
 


 
 









 

 









 

 
 








	Originale	Sostituto	Originale	Sostituto
	Power			3
	TV			4
	→←			5
	Mute			6
	[.]/[▼]			7
	F			8
	O/Timer			9
	Up			0
	Down			Guide
	Right			Pre Ch
	Left			Stop
	P+			<<
	P-			Play
	Vol+			>>
	Vol-			
	1			
	2	