

 





 
 

 

 
 
 

 

 



 
 
 

 
 

 

 
 
 

 
 
 


 








 









 
 
 
 
 
 
 





Originale	Sostituto	Originale	Sostituto
	Power		Power
	Tv/AV		AV
	Mute		Mute
	Timer		Shift + AV
	[.] / [≡?]		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/- / [≡0]		Guide
	P↔P / [≡+]		Pre Ch

Originale	Sostituto	Originale	Sostituto
	Menu		Menu
	Sound		Dual
	Picture		Format
	▼ A-B		Options
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	[≡♦] / Bass		Subt
	TXT/TV		Text
	S.SYS		Smart
	Surround		List



