


 









 














 




 
 


 
 
 

 










 












Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input	 AV
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Preset	 Smart

Originale	Sostituto
 Rec	 Rec
 Play	 Play
 SET	 Media
 Up	 Up
 Pause/Still	 Pause
 Down	 Down
 Stop	 Stop
 Right	 Right
 >>	 >>
 Left	 Left
 Tv/VCR	 TV/R
 Clear	 Exit
 Reset	 Red
 Index	 Blue
 DPC	 Yellow
 Remain	 Green





Originale		Sostituto	
	Display		Info
	→0←		Guide

Originale		Sostituto	

