
 





 

 

 



 

 







 

 


 
 


 


 




 




 


















Originale	Sostituto
 Power	 Power
 Mute	 Mute
 TV/AV	 AV
 TXT/TV	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P↔P / List	 Pre Ch
 -/--	 Guide
 Red	 Red

Originale	Sostituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Stop	 Pause
 Cancel	 Exit
 Size	 Eject
 Recall/Reveal	 Back
 F	 Ok
 Up	 Up
 P+	 Ch +
 Down	 Down
 P-	 Ch -
 Right	 Right
 Vol+	 Vol +
 Left	 Left
 Vol-	 Vol -
 Menu/Index	 Menu





	Originale	Sostituto
	Normal/Memory	Smart
	Play VCR	Play
	<< VCR	<<
	>> VCR	>>
	Stop VCR	Stop

	Originale	Sostituto

