


 



 
 






 

 


 




 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 <<<	 <<<
 TV/VCR	 TV/R	 Play	 Play
 1	 1	 >>>	 >>>
 2	 2	 Stop	 Stop
 3	 3	 i	 Guide
 4	 4	 OK	 Ok
 5	 5	 Clk / Count	 Shift + Ok
 6	 6	 Clear	 Exit
 7	 7	 UP / CH/Track+	 Ch +
 8	 8	 UP / CH/Track+	 Up
 9	 9	 Down / CH/Track-	 Ch -
 0	 0	 Down / CH/Track-	 Down
 Input	 AV	 →	 Right
 SP/LP	 Text	 ←	 Left
 Eject	 Eject		
 Rec	 Rec		
 Pause	 Pause		

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 <<<	 <<<
 TV/VCR	 TV/R	 Play	 Play
 1	 1	 >>>	 >>>
 2	 2	 Stop	 Stop
 3	 3	 i	 Guide
 4	 4	 OK	 Ok
 5	 5	 Clk / Count	 Shift + Ok
 6	 6	 Clear	 Exit
 7	 7	 UP / CH/Track+	 Ch +
 8	 8	 UP / CH/Track+	 Up
 9	 9	 Down / CH/Track-	 Ch -
 0	 0	 Down / CH/Track-	 Down
 Input	 AV	 →	 Right
 SP/LP	 Text	 ←	 Left
 Eject	 Eject		
 Rec	 Rec		
 Pause	 Pause		

