



Originale	Sostituto
TV / Input	AV / Input / RDS
Wide	Picture / Format
Power	Power
1	1
2	2
3	3
[ ] [Y] Reveal	Smart / List
4	4
5	5
6	6
→ ←	Display / Media
7	7
8	8
9	9
Mute	Mute / Dimmer
-/-- / Subcode	Guide / EPG / -/--
0	0

Originale	Sostituto
CS	Fav / Marker / PC
P↔P	Back / Return
F Subtitle / OK	Subtitle / EQ
F Subtitle / OK	OK
Up / P+	Up
Up / P+	CH+ / Page+
Menu / Index	Menu / Home
Left / Vol-	Left
Left / Vol-	Vol-
Right / Vol+	Right
Right / Vol+	Vol+
Down / P-	Down
Down / P-	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / Bass	Yellow / YouTube / Repeat
Blue / Timer	Blue / Prime Video / Random





Originale	Sostituto
Blue / Timer	Sleep / Timer
Cancel	Setup / OPT /
Size	Zoom / Size
Hold	Shift + Stop /
TXT / TV	Text / Goto
Power VCR	Shift + Power
Rec	Rec / Rec Mode
A·B	Audio / Lang I/II
Stop	Stop / Hold
<<	<< / Tune-
<<	<< / Preset-
Play	Play / Slow
>>	>> / Tune+
>>	>>  / Preset+

Originale	Sostituto

