



Originale		Sostituto		Originale		Sostituto	
	[+]/Auto PC		Auto		[> <]/Freeze		Freeze / Timer
	Standby		Power		Digital Zoom		Blank / Mute
	Menu		Menu		Input 3		Volt / Focus
	Shutter		Source		P.Timer		Shift + Freeze / Timer
	Lens Shift		Shift + Power		Keystone		Shift + Up
	ADJ/Image ADJ.		Eco / Aspect		Input 4		Mode
	Up		Up		Screen		Shift + Source
	Down		Down		SEL/Image SEL		Comp / Video
	Left		Left		[i]/Info		Help / Info
	Right		Right		Filter		Shift + Menu
	Select		Enter				
	Zoom +		Vol + / Page +				
	Focus +		+ / Play				
	Input 1		Shift + Comp / Video				
	Zoom -		Vol - / Page -				
	Focus -		- / Stop				
	Input 2		Shift + Mode				

