









Originale		Sostituto		Originale		Sostituto	
	Power		Power		0/AV		AV / Input / RDS
	Clock		Sleep / Timer		0/AV		0
	Preset		Setup / OPT /		OK		OK
	VPS		Smart / List		ATR		D.Menu / Top
	1		1		TV/VCR		Display / Media
	2		2		Index		Info / Angle
	3		3		<<		<< / Tune-
	Prog		TV/Radio /		Play		Play / Slow
	4		4		>>		>> / Tune+
	5		5		Stop		Stop / Hold
	6		6		Pause / Still		Pause / Step / Freeze
	+		CH+ / Page+		Rec		Rec / Rec Mode
	7		7		Reset		Exit / Cancel / Clear
	8		8		Memory		Text / Goto
	9		9				
	-		CH- / Page-				
	CL		Menu / Home				

