



Originale	Sostituto
Power	Power
OSD	Display / Media
Open / Close	Eject / Surround
N/P	Picture / Format
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
RAN	Smart / List
L/R	D.Menu / Top
Slow	Shift + Play /
Resume	Shift + Right
Step	Shift + Pause / Step /
Key+	CH+ / Page+
Return	Back / Return
3D	Shift + 3
Vol+	Vol+
Key-	CH- / Page-
Time	Sleep / Timer

Originale	Sostituto
PDVD	AV / Input / RDS
Vol-	Vol-
Language	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Prog	TV/Radio /
Setup	Setup / OPT /
Up	Up
Title	Sound / Title
Left	Left
Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Zoom	Zoom / Size
Play	Play / Slow
Pause	Pause / Step / Freeze





Originale	Sostituto
Stop	Stop / Hold
Mute	Mute / Dimmer
1	1
2	2
3	3
I<< Prev	I<< / Preset-
4	4
5	5
6	6
>>I Next	>>I / Preset+
7	7
8	8
9	9
<< REV	<< / Tune-
10/0	0
10+	Guide / EPG / -/--
Clear	Exit / Cancel / Clear

Originale	Sostituto
>> FWD	>> / Tune+

