

 

 

 



 




















 

 

 

 





 



 

 


 


 
















 











 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		B4		Rec / Rec Mode
	Guide		Guide / EPG / -/--		5		5
	1		1		6		6
	A1		Shift + 1		7		7
	B1		Play / Slow		8		8
	C1		<< / Tune-		9		9
	A2		Shift + 2		0		0
	B2		Pause / Step / Freeze		List		Smart / List
	C2		>> / Tune+		Q.View/Reveal		Display / Media
	2		2		P:P		Shift + Fav / Marker / PC
	C3		I<< / Preset-		[+]/Info		Info / Angle
	B3		Stop / Hold		S.Mode		Sound / Title
	A3		Shift + 3		Nicam/Audio		Audio / Lang I/II
	3		3		Hold		Shift + Stop /
	A4		Shift + 4		Mix		Shift + Text /
	C4		>>I / Preset+		Size		Zoom / Size
	4		4		Radio		TV/Radio /





Originale	Sostituto
 Index	 Shift + Info / Angle
 Text	 Text / Goto
 Subpage	 Shift + Subtitle / EQ
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Prog+	 CH+ / Page+
 Up	 Up
 Down	 Down
 Prog-	 CH- / Page-
 Left	 Left
 Vol-	 Vol-
 Vol+	 Vol+
 Right	 Right
 OK/Enter	 OK
 Exit	 Exit / Cancel / Clear
 Sub-T	 Subtitle / EQ

Originale	Sostituto
 FAV	 Fav / Marker / PC
 Aspect	 Picture / Format
 Sleep	 Sleep / Timer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

