







 












 

 

 

 










Originale	Sostituto
 Power	 Power
 Tv	 TV/R
 P.Mode	 Format
 S.Mode	 Dual
 Sleep	 Sleep
 Aspect	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Originale	Sostituto
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV
 Ch+	 Ch +
 Ch-	 Ch -
 MTS	 Media
 C.C	 Text
 Info/Display	 Info
 Menu	 Menu
 Return	 Back
 Ch.List	 List
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right





Originale	Sostituto
 Left	 Left
 Enter	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 V-Chip	 Options
 Fav.Ch	 Shift + Pre Ch
 Fav.+	 >>
 Fav.-	 <<
 Add/Erase	 Shift + Exit
 Auto	 D. Menu
 HDMI	 Smart
 VGA	 Subt
 COMP	 Eject

Originale	Sostituto

