










 

 



 

 
 
 

 
 


 





 

 



 



 



 


 
 

 








Originale		Sostituto		Originale		Sostituto	
	On/Standby		Power		Preset Down		Ch -
	Vol-		Vol -		Preset Up Tuner		Ch +
	Vol+		Vol +		<< Tape2		<<
	CD		Red		>> Tape2		>>
	Tuner/Band		Green		Play 1 Tape		Left
	Tape (1-2)		Yellow		Stop 1 Tape		Ok
	Video/AUX		Blue		Play Tape2		Right
	Equalizer Mode		Dual		Rec/Pause		Down
	X-Bass		Subt		Disc 1 CD		1
	Play/Back CD		Play		Disc 2 D		2
	Stop CD		Stop		Disc 3 CD		3
	Pause CD		Pause		Memory CD		Menu
	<</I<< CD		I<<				
	>>/I>> CD		I>>				
	Clear CD		Exit				
	Random CD		Media				
	Disc Skip CD		Smart				

