

 




 


 







Originale	Sostituto
 Power	 Power
 M	 Menu
 OK	 Ok
 i	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 Recall	 Pre Ch
 -/--	 Guide
 [<>]	 Format
 Mute	 Mute
 I-II	 Dual
 TV	 TV/R
 Exit	 Exit
 Prog+	 Ch +
 Prog-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [≡]	 Text





Originale		Sostituto		Originale		Sostituto	
	[≡o]		Options				
	[≡+]		Smart				
	[≡x]		Subt				
	[.≡]		AV				
	[≡◆]		List				
	[≡?]		Media				
	[≡i]		Back				

