 

 

 
 
 
 


 
 

 
 
 

 





 
 

 
 
 



 
 



 

 
 


 
 


 

 

 


 



 
 
 

 
 








Originale		Sostituto		Originale		Sostituto	
	Operate		Power		C/Erase		3D
	Open/Close		Eject		ShowView		Format
	1		1		HDD		Smart
	2		2		DVD		Media
	3		3		Input		AV
	4		4		Start Menu		Menu
	5		5		DVD Menu/Original		Shift + Menu
	6		6		Return		Back
	7		7		Exit		Exit
	8		8		DVD Title/Rec List		D. Menu
	9		9		SET/Enter		Ok
	0		0		Up		Up
	-/--		Guide		Down		Down
	Tv/DVD		TV/R		Right		Right
	CH+		Ch +		Left		Left
	CH-		Ch -		Dubbing		List
	Direct		Options		P IN P		Text





Originale	Sostituto	Originale	Sostituto
Timer On/Off	+ Shift + AV	Replay	+ Shift + Play
Timeshift	+ Shift + Guide	Skip Search	+ Shift + TV/R
Blue/A-B	Blue	Zoom/Rec Mode	+ Shift + Rec
Red/B	Red	Function	+ Shift + D. Menu
Green/C	Green	Audio	Dual
Yellow/D	Yellow	Angle	+ Shift + Red
Play	Play	Subtitle	Subt
<</REV	<<	Direct Rec Tv	+ Shift + Text
>>/FWD	>>	Tamper Proof/On Screen	+ Shift + Format
Stop/Live	Stop	RGB Off/Chapter Mark	+ Shift + Pre Ch
Still/Pause	Pause	Operate Tv	+ Shift + Power
I>/Slow	Sleep	Back	Info
Rec	Rec	Vol+ Tv Control	Vol +
Stop Rec	+ Shift + Stop	Vol- Tv Control	Vol -
Pause Rec	+ Shift + Pause	CH+ Tv Control	+ Shift + Ch +
>>I/F.ADV Skip	>>I	CH- Tv Control	+ Shift + Ch -
I<</I F.ADV	I<<	Input Tv Control	Pre Ch

