 

 








 
 

 





 



 

 
 


 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 DTV	 Smart
 Radio	 TV/R
 USB	 Options
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide

Originale	Sostituto
 Recall	 Back
 Vol +	 Vol +
 Vol -	 Vol -
 P.Mode	 Format
 S.Mode	 Shift + Dual
 FAV	 Pre Ch
 CH +	 Ch +
 CH -	 Ch -
 Menu	 Menu
 Exit	 Exit
 Info	 Info
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Originale	Sostituto	Originale	Sostituto
Sleep	Sleep	Red / Goto	Red
Aspect	3D	Green / A-B	Green
Subtitle	Subt	Yellow / Angle	Yellow
Text	Text	Blue / Repeat	Blue
Audio	Dual		
Text Hold	Shift + Text		
Zoom / Text	Eject		
Power / Display	Shift + Power		
Rec / DVD Menu	Rec		
I<<	I<<		
>>I	>>I		
Stop / Eject	Stop		
<<	<<		
>>	>>		
Play	Play		
Pause	Pause		
Rec List / DVD Setup	List		

Originale	Sostituto
Red / Goto	Red
Green / A-B	Green
Yellow / Angle	Yellow
Blue / Repeat	Blue

