



Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	[≡]		Text / Goto		Source		AV / Input / RDS
	[≡?]		Shift + Info / Angle		DTV		Shift + D.Menu / Top Menu
	[...]		Subtitle / EQ		EPG		Guide / EPG / -/-
	[≡+]		Stop / Hold		ESG		Shift + Setup / OPT / Tools
	[≡O]		Sleep / Timer		Radio		TV/Radio /
	[≡◆]		Zoom / Size		▼/O)/I/II/I+II		Shift + Down
	1		1		Vol+		Vol+
	2		2		P+		CH+ / Page+
	3		3		AV Mode		Shift + AV / Input / RDS
	4		4		Mute		Mute / Dimmer
	5		5		Vol-		Vol-
	6		6		P-		CH- / Page-
	7		7		Surround		Eject / Surround
	8		8		DTV Menu		D.Menu / Top
	9		9		List		Smart / List
	Recall		Back / Return		[i+]		Info / Angle



