 


 


 
 









Originale	Sostituto
 Power	 Power
 Mute	 Mute
 DTV	 Smart
 Radio	 TV/R
 USB	 3D
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide

Originale	Sostituto
 Recall	 Back
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 FAV	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Source	 AV
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok



