


 

 


 







 
 



 



 

 
 
 

 

 
 
 

 
 
 
 
 
 
 

 
 


 

 

 

 
 

 

 



 

 













 



 

 
 




 











Originale		Sostituto		Originale		Sostituto	
	Power Tv		Power		←		Shift + Left
	NET		Media		→		Shift + Right
	[i+]		Info		Pause		Pause
	FAV		Shift + Pre Ch		1		1
	ATV		Smart		2		2
	DTV		D. Menu		3		3
	SAT		Shift + Media		4		4
	Radio		TV/R		5		5
	Power Source		Shift + Power		6		6
	<< Source		Shift + <<		7		7
	Play Source		Play		8		8
	>> Source		Shift + >>		9		9
	USB Rec		Shift + Rec		0		0
	Rec Source		Rec		Recall		Pre Ch
	Rec Stop		Shift + Stop		Source		AV
	Stop Source		Stop		I/II/I+II/▼/O		Dual
	Ready/Time Shift		Options		[<>]		Format





Originale	Sostituto
 AV Mode	 Shift + AV
 Eco	 Shift + 3D
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 [=]	 Text
 3D	 3D
 End	 Exit
 EPG	 Guide
 Back	 Back
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Originale	Sostituto
 OK	 Ok
 >>	 >>
  <<	  <<
 >>	 >>
 <<	 <<
 [...]	 Subt
 [≡?]	 List
 [≡o]	 Sleep
 [≡+]	 Eject
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

