






 

 

 

 
 
 
 
 

 
 


 







 
 





 
 
 
 

 
 



 


 



 





 
 

 







Originale		Sostituto		Originale		Sostituto	
	On/Standby		Power		Stop		Stop
	Timer		AV		Pause		Pause
	Clock		3D		1/Memory		1
	Memory		Ok		2/Clear		2
	Clear		Exit		3/Random/Repe		3
	Random/Repeat		Text		4/Clock		4
	Sleep		Sleep		5/Timer		5
	Display		Info		6/Sleep		6
	CD		Yellow		7		7
	Tuner/Band		Green		8		8
	Tape		Red		9		9
	Video/AUX		Blue		0		0
	>>/Tuning Up		>>		+10		Guide
	<</Tuning		<<		Shift		Media
	>>I/Preset Up		>>I		Treble/Bass		Smart
	I<</Preset		I<<		Vol+		Vol +
	Play		Play		Vol-		Vol -

