



Originale	Sostituto
Open / Close	Eject / Surround
Operate	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
CH +	CH + / Page+
CH -	CH - / Page-
C / Erase	Shift + Exit / Cancel / Clear
Direct	Setup / OPT /

Originale	Sostituto
i	Info / Angle
Guide	Guide / EPG / -/--
Rec Mode	Shift + Rec / Rec Mode
Input	AV / Input / RDS
Timer On / Off	Sleep / Timer
Time Shift	Text / Goto
HDD	Shift + 7
DVD	Shift + 2
TV / DVD	TV/Radio /
Start Menu	Menu / Home
Up	Up
Rec List / DVD Top Menu	Smart / List
Right	Right
Down	Down
Original / Playlist / DVD Menu	D.Menu / Top
Left	Left
Exit	Exit / Cancel / Clear





Originale	Sostituto
Return	Back / Return
<< REV	<< / Tune-
Set / Enter	OK
Play	Play / Slow
Green	Green / APP / Repeat
Red	Red / Netflix / Search
Blue	Blue / Prime Video / Random
>> FWD	>> / Tune+
Yellow	Yellow / YouTube / Repeat
Slow	Shift + Play /
REC	Rec / Rec Mode
Angle	Shift + Info / Angle
Stop / Live	Stop / Hold
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Replay	Sound / Title
I<< / <II F.Adv / Day -	I<< / Preset-

Originale	Sostituto
>>I / F.Adv II> / Day +	>>I / Preset+
Still / Pause	Pause / Step / Freeze
Skip Search	Shift + Red / Netflix /
Chapter Mark	Fav / Marker / PC
Function	Picture / Format
REC Pause	Shift + Pause / Step /
On Screen Tamper Proof	Vol+
RGB OFF Tamper Proof	Vol-
Display / Back Light	Display / Media
REC Stop	Shift + Stop /
Direct REC TV	Shift + Eject / Surround

