



Originale	Sostituto
 On/Standby	 Power
 Memory	 Menu
 Clear/Dimmer	 Exit
 Select Disc 1	 Shift + 1
 Select Disc 2	 Shift + 2
 Select Disc 3	 Shift + 3
 Select Disc 4	 Shift + 4
 Select Disc 5	 Shift + 5
 Random CD	 Media
 Pause CD	 Pause
 Stop CD	 Stop
 Play CD	 Play
 CD	 Yellow
 Tuner (Band)	 Green
 Video/AUX/USB	 Red
 Pause USB	 Shift + Pause
 Play USB	 Shift + Play

Originale	Sostituto
 Stop USB	 Shift + Stop
 Tuning/Cursor Up	 Up
 Tuning/Cursor	 Down
 Tuning/Cursor Right/Preset	 Right
 Tuning/Cursor Left/Preset	 Left
 Display	 Info
 Folder	 Smart
 Clock/Timer	 AV
 RDS ASPM	 TV/R
 RDS PTY	 Format
 RDS Display	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





	Originale	Sostituto	
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Equalizer Mode		Dual
	X.Bass/Demo		Subt
	Vol+		Vol +
	Vol-		Vol -

	Originale	Sostituto

