























 









 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Size/F3		3
	Input		AV / Input / RDS				
	Mute		Mute / Dimmer				
	Menu		Menu / Home				
	Vol+		Vol+				
	Up		Up				
	Left		Left				
	Enter		OK				
	Right		Right				
	Vol-		Vol-				
	Down		Down				
	Return		Back / Return				
	Display/F1		Display / Media				
	Display/F1		1				
	Mode/F2		Smart / List				
	Mode/F2		2				
	Size/F3		Zoom / Size				

