 

 






 

 




 

 



 


 
 

 
 


 

 

 

 
 



 



 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	Input		AV / Input / RDS		P+		CH+ / Page+
	TV/DVD		TV/Radio /		[i+]		Info / Angle
	DTV/ATV		Smart / List		0		0
	EPG		Guide / EPG / -/-		Recall		Fav / Marker / PC
	[<>]		Picture / Format		P-		CH- / Page-
	Mute		Mute / Dimmer		Red/Left Skip		Red / Netflix / Search
	1		1		Green/Left Rev		Green / APP / Repeat
	2		2		Yellow/Right FWD		Yellow / YouTube / Repeat
	3		3		Blue/Right Skip		Blue / Prime Video / Random
	Vol+		Vol+		Pause		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Setup/Tv Menu		Setup / OPT /
	Vol-		Vol-		DVD Menu		Menu / Home
	7		7		Up		Up
	8		8		Left/Left Slow		Left





Originale	Sostituto
OK	OK
Right/ > Slow	Right
Return	Back / Return
Down	Down
Top Menu	D.Menu / Top
Cancel	Exit / Cancel / Clear
[...]	Subtitle / EQ
[≡◆]/Audio	Audio / Lang I/II
Play Mode	Display / Media
[≡]/Text	Text / Goto
[≡?]/Angle	+  Shift + Info / Angle
[≡o]/Zoom	Zoom / Size
[≡+] Sleep / Timer	

Originale	Sostituto

