







 
 


 

 

 

 

 
 
 
 
 

 

 

 

 





Originale	Sostituto
 Power Operate	 Power
 Eject	 Eject
 Open/Close	 Mute
 DVD/VCR	 Smart
 Timer Rec	 Red
 Input Select	 AV
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Return	 Shift + Exit
 Cancel	 Back
 Title Menu/Top	 Menu
 Up	 Up
 CH+	 Ch +
 Down	 Down
 CH-	 Ch -
 TRK+	 Vol +
 Right	 Right
 Left	 Left
 TRK-	 Vol -
 Enter	 Ok
 DVD Menu	 D. Menu
 Setup	 Options
 Stop	 Stop
 Play	 Play
 Pause/Still	 Pause



