



Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	Play		Play / Slow		0		0
	Pause		Pause / Step / Freeze		Info		Info / Angle
	Stop		Stop / Hold		EPG		Guide / EPG / -/-
	Rec		Rec / Rec Mode		≡		Menu / Home
	<<		<< / Tune-		Source		AV / Input / RDS
	l<<		l<< / Preset-		Up		Up
	>>l		>>l / Preset+		Down		Down
	>>		>> / Tune+		Right		Right
	1		1		Left		Left
	2		2		OK		OK
	3		3		Exit		Exit / Cancel / Clear
	4		4		Smart		Smart / List
	5		5		←		Back / Return
	6		6		Vol+		Vol+
	7		7		P+		CH+ / Page+





Originale	Sostituto
Vol-	Vol-
Home	+ Shift + Menu /
P-	CH- / Page-
Netflix	+ Shift + Red / Netflix /
You Tube	+ Shift + Yellow / YouTube /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
O)/II	Audio / Lang I/II
[=]	Text / Goto
Subt.	Subtitle / EQ

Originale	Sostituto

