



Originale	Sostituto	Originale	Sostituto
Power	Power	I<<	I<< / Preset-
Control	Setup / OPT /	Stop	Stop / Hold
[i+]	Info / Angle	>>I	>>I / Preset+
P.Info	Smart / List	1	1
ATV	Shift + Smart / List	2	2
DTV	Shift + Display / Media	3	3
SAT	Shift + 0	4	4
Radio	TV/Radio /	5	5
Power Ext. Media	Shift + Power	6	6
←	Shift + Left	7	7
Pause	Pause / Step / Freeze	8	8
→	Shift + Right	9	9
Rec	Rec / Rec Mode	Recall	Fav / Marker / PC
<<	<< / Tune-	0	0
Play	Play / Slow	Source	AV / Input / RDS
>>	>> / Tune+	I/II/I+I/▼/O)	Audio / Lang I/II
Rec Stop	Shift + Stop / Hold	[<>]	Picture / Format

Hold

Originale	Sostituto
I<< / Preset-	I<< / Preset-
Stop / Hold	Stop / Hold
>>I / Preset+	>>I / Preset+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Fav / Marker / PC	Fav / Marker / PC
0	0
AV / Input / RDS	AV / Input / RDS
Audio / Lang I/II	Audio / Lang I/II
Picture / Format	Picture / Format





Originale	Sostituto
AV Mode	Shift + AV / Input / RDS
Eco	Display / Media
Mute	Mute / Dimmer
Vol+	Vol+
P+	CH+ / Page+
[=]	Text / Goto
Vol-	Vol-
P-	CH- / Page-
Home	Menu / Home
EPG	Guide / EPG / -/--
Nothing	Eject / Surround
Up	Up
Left	Left
OK	OK
Right	Right
End	Exit / Cancel / Clear
Down	Down

Originale	Sostituto
Back	Back / Return
[...]	Subtitle / EQ
[=?]	D.Menu / Top
[=o]	Sleep / Timer
[=◇]	Zoom / Size
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

