


 





















 

 

 




 



 
 


 



 
 


 





 





Originale		Sostituto		Originale		Sostituto	
	On/Standby		Power		Disc CD 1		1
	Vol+		Vol +		Disc CD 2		2
	Vol-		Vol -		Disc CD 3		3
	X-Bass/Equalizer		Smart		Disc Skip		Media
	Video/AUX		Red		I<</<< CD		I<<
	Tape (1 to 2)		Blue		>>/>>I CD		>>I
	Tuner(Band)		Green		Stop CD		Stop
	CD		Yellow		Play CD		Play
	Rec/Pause Tape 2		Rec		Memory CD		3D
	<< Tape 2		<<		Clear		Exit
	>> Tape 2		>>		Random		TV/R
	Play Tape 2		Left		Pause CD		Pause
	Play Tape 1		Right				
	Stop Tape		Ok				
	Tuner Preset Up		Ch +				
	Tuner Preset		Ch -				
	PTY TI		Back				

