 

 

 
 
 

 

 

 

 

 

 
 
 
 



 








 






Originale	Sostituto
 On/Standby	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide
 Back/Repeat	 Back
 Memory	 Smart
 Clear	 Exit
 Clock/Timer	 AV

Originale	Sostituto
 Sleep	 Sleep
 Bass/Treble	 Options
 X-Bass	 Dual
 Random	 Subt
 <</></Tuning	 <<
 >>/>>/Tuning	 >>
 Folder	 Text
 Demo/Dimmer	 Info
 Preset Up	 Up
 Preset Down	 Down
 Enter	 Ok
 Vol+	 Vol +
 Vol+	 Right
 Vol-	 Vol -
 Vol-	 Left
 Mute	 Mute
 CD	 Yellow



