





Originale	Sostituto
 On / Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Vol +	 Vol +
 Vol -	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right

Originale	Sostituto
 Left	 Left
 Enter	 Ok
 Video / AUX	 Red
 Tuner / Band	 Green
 CD	 Yellow
 Tape	 Blue
 >> / Preset Up / >>	 Ch +
 << / Preset Down / <<	 Ch -
 MP3 Navigation	 Media
 Character	 Smart
 MP3 Display	 Info
 Equalizer Mode	 Dual
 X-Bass	 Subt
 Clock / Timer	 Menu
 Clear / Dimmer	 Exit
 Random CD	 Back
 Pause CD	 Pause





Originale	Sostituto
 Play CD	 Play
 Stop CD	 Stop
 Memory CD	 3D
 < Tape	 <<
 Tape >	 >>
 Stop Tape	 Shift + Stop
 Rec / Pause Tape	 Rec
 Disc Select 1	 Shift + 1
 Disc Select 2	 Shift + 2
 Disc Select 3	 Shift + 3
 Disc Select 4	 Shift + 4
 Disc Select 5	 Shift + 5

Originale	Sostituto

