








 

 



 





 


 



 
 
 



 
 





 

 





 




 
 
 
 
 
 












Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Input	 AV
 Tv	 TV/R
 PC	 Smart
 AV Mode	 3D

Originale	Sostituto
 Sleep	 Sleep
 Vol+	 Vol +
 Vol-	 Vol -
 Freeze	 Shift + Media
 View Mode	 Media
 CH+	 Ch +
 CH-	 Ch -
 Surround	 Dual
 MPX	 Format
 Display	 Info
 Menu	 Menu
 Exit	 Exit
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale		Sostituto		Originale	Sostituto
	Enter		Ok		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	[≡]		Text		
	[...]		Subt		
	USB		Options		
	Stop		Stop		
	[≡♦]		List		
	[≡+]		Guide		
	<<		<<		
	>>		>>		
	[≡?]		D. Menu		
	[≡o]		Eject		
	Pause		Pause		
	Play		Play		

