






















Originale	Sostituto
 Power	 Power
 Tv/Video	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 -/--	 Guide / EPG / -/--
 Vol-	 Vol-
 Vol-	 Left
 CH+	 CH+ / Page+

Originale	Sostituto
 CH+	 Up
 Vol+	 Vol+
 Vol+	 Right
 CH-	 CH- / Page-
 CH-	 Down
 Menu	 Menu / Home
 Mute	 Mute / Dimmer
 [*]	 Picture / Format
 Lock	 Display / Media

