



Originale	Sostituto
On/Standby	Power
Open/Close	Eject / Surround
Play/Pause Bluetooth	Blue / Prime Video / Random
Play/Pause USB	Pause / Step / Freeze
Play/Pause CD	Play / Slow
Pairing	Smart / List
Stop	Stop / Hold
[DAB]/Tuner	TV/Radio /
Eco	Back / Return
Display	Display / Media
Input/Audio Line	AV / Input / RDS
Clock	Text / Goto
Timer	Shift + Sleep / Timer
Sleep	Sleep / Timer
Folder	Guide / EPG / -/--
Up Preset	Up
Play Mode	Yellow / YouTube / Repeat

Originale	Sostituto
<</> / << Tuning	<< / Tune-
Enter	OK
Tuning >>/>>	>> / Tune+
X-Bass	Audio / Lang I/II
Down Preset	Down
Mute	Mute / Dimmer
Treble	CH+ / Page+
Memory	Rec / Rec Mode
Vol+	Vol+
Clear	Exit / Cancel / Clear
Bass	CH- / Page-
Dimmer	Shift + Mute / Dimmer
Vol-	Vol-
ASPM RDS	Setup / OPT / EQ
PTY RDS	Subtitle / EQ
Disp RDS	Picture / Format
Scan DAB	Zoom / Size



