














 









Originale	Sostituto
 Operate	 Power
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 CH +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Direct	 Setup / OPT /
 -/--	 Guide / EPG / -/--
 0	 0
 C / Erase	 Shift + Exit / Cancel / Clear

Originale	Sostituto
 Show View	 Info / Angle
 TV / DVD	 TV/Radio /
 Timer On / Off	 Sleep / Timer
 Time Shift	 Text / Goto
 Dubbing	 Vol-
 P in P	 Picture / Format
 Input	 AV / Input / RDS
 HDD	 Shift + 7
 Start Menu	 Menu / Home
 DVD	 Shift + 2
 Rec List / DVD Top Menu	 Smart / List
 Up	 Up
 Original / Playlist / DVD Menu	 D.Menu / Top
 Left	 Left
 Set / Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear





Originale	Sostituto
	 Down
	 Back / Return
	 Blue / Prime Video / Random
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Pause / Step / Freeze
	 Stop / Hold
	 Shift + Slow / Play /
	 I<< / Preset-
	 >>I / Preset+
	 Sound / Title
	 Shift + Red / Netflix /
	 Zoom / Size

Originale	Sostituto
	 Shift + Info / Angle
	 Audio / Lang I/II
	 Subtitle / EQ
	 Rec / Rec Mode
	 Shift + Stop /
	 Shift + Pause / Step /
	 Shift + Rec / Rec Mode
	 Shift + Eject / Surround
	 Fav / Marker / PC
	 Vol+
	 Display / Media

