





 

 












Originale	Sostituto
 Standby	 Power
 Tv Operate	 Shift + Power
 CH+ Tv	 Shift + CH+ /
 Vol+ Tv	 Vol+
 Timer On/Off	 Sleep / Timer
 Input Select Tv	 Shift + AV / Input / RDS
 CH- Tv	 Shift + CH- /
 Vol- Tv	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Set	 Setup / OPT /
 SV/V+/Timer	 Picture / Format
 Left	 Left
 Right	 Right
 Down	 Down
 Clear	 Exit / Cancel / Clear
 <</REW	 << / Tune-

Originale	Sostituto
 Play/X2	 Play / Slow
 >>/FF	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause/Still	 Pause / Step / Freeze
 Tape Speed	 Zoom / Size
 Audio Out	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Mode OSD	 Text / Goto
 4	 4
 5	 5
 6	 6
 Display	 Display / Media
 7	 7
 8	 8




Originale
Sostituto

	9		9
	Channel+		CH+ / Page+
	-/--/AM/PM		Guide / EPG / -/--
	0		0
	Input Select		AV / Input / RDS
	Channel-		CH- / Page-
	TV/VCR		TV/Radio /
	Skip Search		Smart / List
	Zero Back		Back / Return
	I>/Slow		Yellow / YouTube / Repeat
	DPSS-		I<< / Preset-
	DPSS+		>>I / Preset+
	Lock		Blue / Prime Video / Random

Originale
Sostituto

